 



Care/Cleaning Instructions:

- Unscrew the base of your light up anal plug and remove the white light up disk before cleaning.
- Do not submerge the white light up disk in any liquids.
- Clean each piece separately with toy cleaner or warm water and a mild disinfectant soap before and after each use.
- Towel or air dry each piece completely before storing.
- Store in a clean, cool and dry place. Do not expose to direct sunlight.



Battery Information:

- Cheeky Charm's Light Up butt plug comes with 2 x LR932 batteries.
- Only use 2 x LR932 batteries in your light up anal plug. Using any other batteries may cause malfunction.
- To change the batteries, unscrew the outer metal casing of the base of the plug and remove the white light disk.
- Lift the lid of the light up disk at the lip and remove the battery pack in the center. Replace batteries as needed.
- Replace the battery pack with the new batteries and gently push the lid back onto the light disk.
- Put the white light up disk back into the center of the plug and screw the outer metal casing back onto the base.
- Play time is approximately 20 hours.

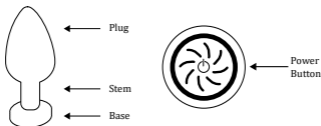

How to Use Cheeky Charm's Light Up Anal Plug:

- Remove the plastic battery pull tab by unscrewing the outer metal casing of the base of the plug.
- Remove the plastic tab while securing the white light disk in the middle of the plug.
- Once the plastic battery tab is removed, be sure the white light up disk is in the middle of the base with the button side of the disk up.
- Securely screw the outer metal casing back onto the plug.
- To turn on/off the light up functions, press the middle of the light disk and toggle through the 3 functions.
- We suggest applying your preferred lubricant around the anus and on the plug.
- Press the tip of the plug against the anus and gradually increase pressure until the anal plug is comfortably inserted.
- Be sure not to insert the base of the plug.
- Do not use your toy on swollen, bruised or inflamed areas including skin lacerations and/or anal fissures.
- Do not use your toy if you are experiencing a hemorrhoid or prostate condition.
- Discontinue use immediately if any irritation or discomfort occurs.