




Care/Cleaning Instructions:

- Ensure your toy is switched off and the charger is completely disconnected before cleaning.
- We suggest cleaning your toy with toy cleaner or warm water and soap before and after each use.
- Use caution when cleaning your toy. Moisture in the battery component can cause malfunction.
- Be sure to let your toy dry completely before storing.
- Use the storage pouch provided and be sure to keep your toy separate from products made with different materials.
- Store in a clean, cool and dry place. Do not expose to direct sunlight.



Charging Instructions:

- We suggest fully charging your toy before use.
- Only use the charging cable provided to charge your battery. Using any other charging cable may cause malfunction.
- Do not charge your battery in or around water.
- Swagger features a magnetic charging cable; simply attached the cable to the two magnetic connectors on the back of the vibe.
- Your toy will blink while charging.
- Swagger's light will remain steady when your toy is fully charged.
- Full charging time is 2 hours.
- Play time is approximately .83 hour.

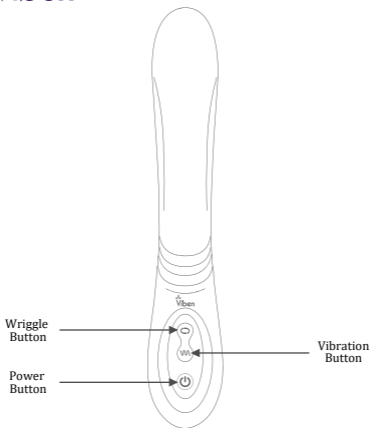

How to use Swagger:

- Allow your toy to fully charge before play.
- Press and hold the power button for 3 seconds to turn on/off. Indicator light will illuminate when your toy is powered on.
- Press the vibration function button to toggle through patterns. Press and hold for 3 seconds to power off the vibration function.
- Press the wriggle function button toggle through the rotation speeds. Press and hold for 3 seconds to power off the wriggle function.
- All indicator lights will be off when your toy is fully powered off.
- Do not use your toy on swollen, bruised or inflamed areas including skin lacerations.
- Discontinue use immediately if irritation or discomfort occurs.